


## Assembly Instructions -Metal Case for NanoPi NEO Plus2

### Assembly

- ① Make sure you have a NEO Plus2, a heat sink and a thermal paste at hand. Stick the thermal paste to the NEO Plus2's CPU;

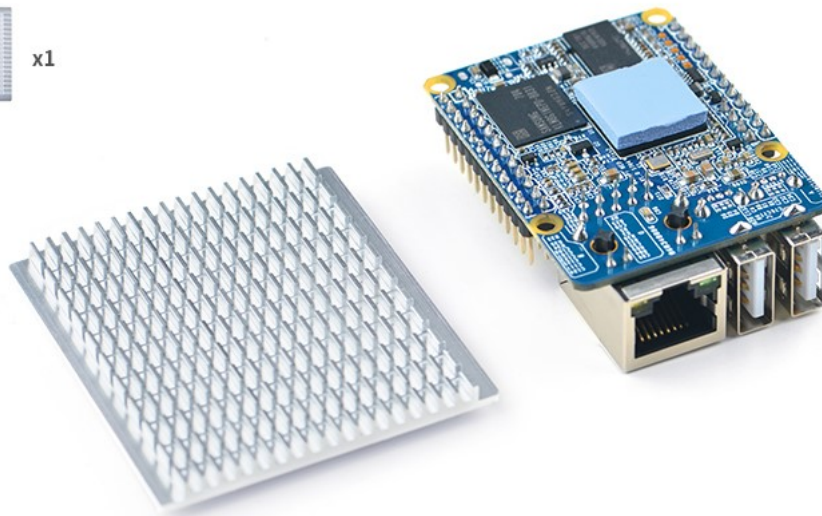


- ② Mount the heat sink onto the NEO Plus2 with four M2.5\*4.5mm screws;



③ Connect an antenna to the board;



④ Insert this NEO Plus2 into a housing through the teeth of the housing's inner surface;

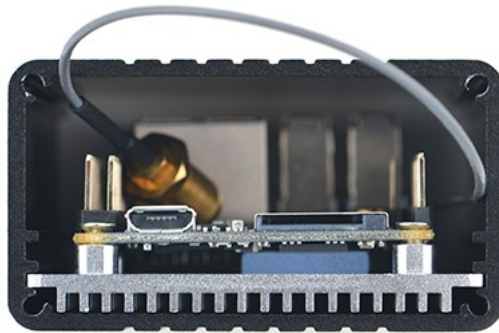

⑤ Install the housing's back cover with openings for Ethernet and USB connectors and make sure the openings match the connectors' positions. Run four four M2.5\*2.5mm screws to make the cover in close contact with the housing;



⑥ Install the other cover with an opening for an antenna, let the antenna go through the opening and two washers and run a bronze nut to make the antenna in close contact with the cover;



⑦ Run four M2.5\*2.5mm screws to make the cover in close contact with the housing;



⑧ Assemble the remaining part of the antenna;

