



Assembly Instructions -Metal Case for NanoPC-T3-Plus

Assembly

- ① Take the bottom housing with cutouts for HDMI, Ethernet and USB on an edge. Put a NanoPC-T3 Plus on it and make sure the board's Ethernet port, USB port and HDMI ports line up with the corresponding cutouts on the housing. Give a screw to each of the four screw holes on the board and tighten them in place;

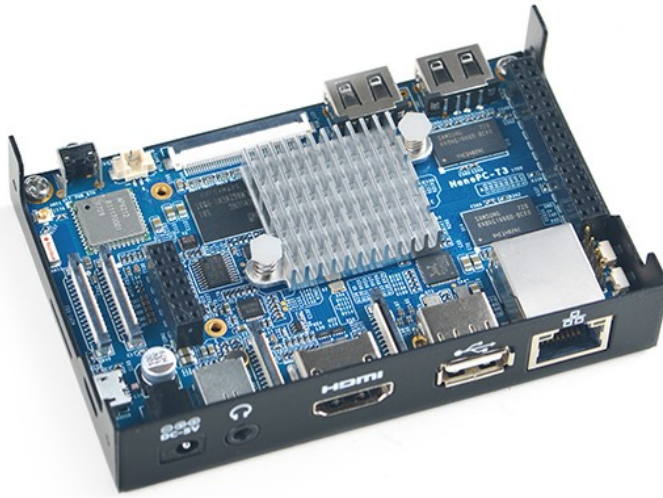

- ② Connect an antenna to the board;

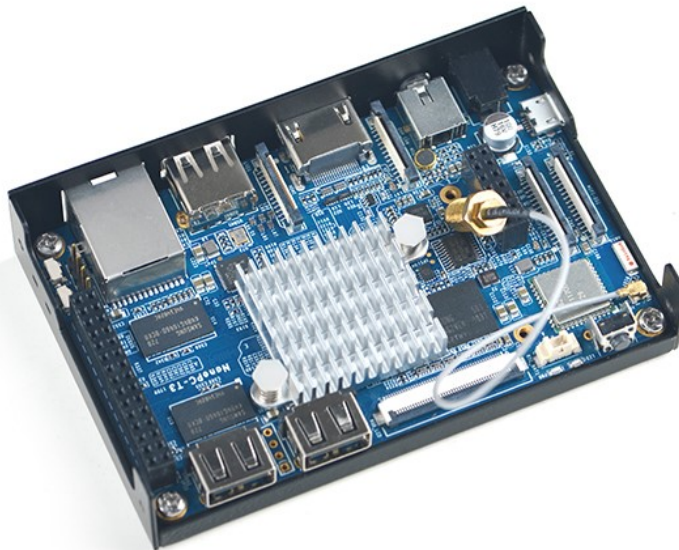

- ③ Install the other cover with an opening for an antenna, let the antenna go through the opening and two washers and run a bronze nut to make the antenna in close contact with the cover;



- ④ Give a black screw to each of the four screw holes on two short edges and tighten them in place;



- ⑤ Assemble the remaining part of the antenna;

